



# Planning Pathways

## Preventing erosion and intercepting runoff

Lake friendly living  
means using lakeshore  
BEST MANAGEMENT  
PRACTICES

### BMP

Planning Pathways

### STANDARDS

#### Recreation Area

- Soil erosion is not occurring on site (no eroding pathways, or exposed dirt)

### LAKE BENEFITS

Properly designed pathways direct foot traffic, absorb water, reduce the rate of flow, and protect soil. Pathways can also reduce the potential for erosion and minimize the amount of pollutants flowing from your property into local streams and lakes.

### MATERIALS

This is a mix of wood fibers, soil, and gravel, which holds up to runoff and has a natural look. Crushed stone is available from your local gravel pit. One option for pathway materials includes setting stepping stones into a crushed stone base. The crushed stone allows runoff to infiltrate, and the stepping stones are comfortable for bare feet.

## Planning Pathways

**Description:** Meandering pathways that utilize crushed stone and Erosion Control mix for filtration.

**Purpose:** Properly designed pathways direct foot traffic, absorb water, reduce the rate of flow, and protect soil. Pathways can also reduce the potential for erosion and minimize the amount of pollutants flowing from your property into local streams and lakes.

**How to:** Install narrow, meandering pathways in high-use areas. Reroute paths that go directly down steep slopes or install steps or waterbars\* to break up the slope.


- Ideally, paths should be no more than 3'-4' wide.
- The walking surface should be covered with 3"-4" of material such as Erosion Control Mix, pine needles, bark mulch, crushed stone, wood chips, or other material. This will define the path, guide foot traffic, and reduce soil erosion.
- Paths should be meandering, depending on the slope, to provide opportunities for runoff to disperse into adjacent vegetation.
- If formal pathways do not currently exist, the new paths can be clearly marked with strategic plantings, stones, solar lights, etc. along the edges.

**Maintenance:** To maintain these structures, periodically remove accumulated debris from the surface. Mulched pathways may need to be re-shaped and additional material may be needed to replace what has washed or worn away. Using non-woven geotextile fabric below stone pathways will extend their life.

**\*Waterbars:** Install waterbar "speed bumps" to break up the slope and keep water from concentrating on a pathway. Fill behind with crushed stone to help runoff soak into the ground and direct water into vegetated areas. Rot resistant logs such as cedar and hemlock or pressure treated timbers can be used. Extend past the outside edge of both sides of the path and install at a 30-degree angle. Secure the waterbar with large stones on the downhill side and/or pound in with pieces of rebar steel.



Source: hoehnenlandscaping.com

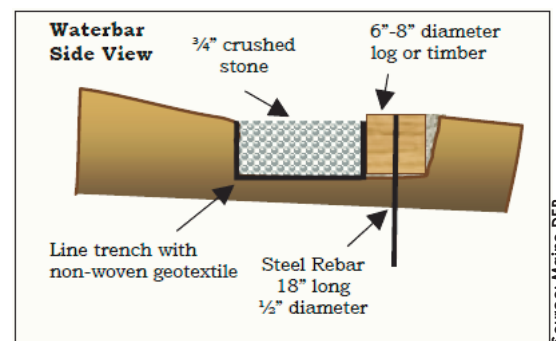

Source: Maine DEP